

# Installation Guide

Wi-Fi 6 3000Mbps Outdoor Cloud Access Point

WI-AP316AX

## Package Contents



WI-AP316AX x 1



Waterproof Joint x 2



Stainless Steel Cable Tie x 1



Mount Bracket x 1



Screw x 2




Rubber screws for plugs x 1



Quick installation Guide x 1

## Interface and Indicators

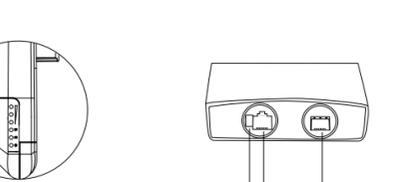

LED	Description
	Light On: Power On
	Light On: Wired Internet Connected Light Blink: Wired Data in Transmission
	Light On: Optical Signal Received Light Blink: Optical Data in Transmission
	AP Mode WiFi Signal Indication Light One Light On: 25% Two Lights On: 50% Three Lights On: 100%  Client Mode WiFi Signal Indication Light One Light On: -94dBm Two Lights On: -77dBm Three Lights On: -65dBm
Number	Description
1	Reset (Press and hold the button for 6s, reset to the factory default settings.)
2	Ethernet port (PoE 48V PoE In)
3	2.5Gbps SFP port

- Operational environment.



Suitable for safe use in areas below to 2000 meters based on sea level.



Only Suitable for safe use in non-tropical climatic conditions.


## Mounting

1. Install the antennas




1

2. Fasten the bracket to pole

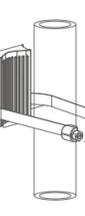


2

3. Hang up the AP to the bracket

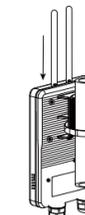

3

4. Plug the Internet cable and then fasten the waterproof head

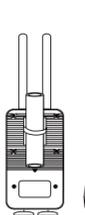


4

## Configuration Method


**Method 1.** Connect computer to the wireless signal of AP, the default SSID is "WI-TEK xxxx". Password is 88888888



**Method 2.** Connect computer to the AP by Ethernet cable.

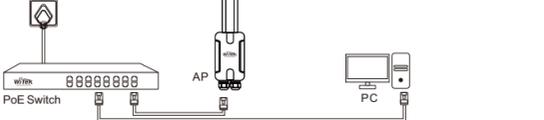

**Step 1.** On the computer, please set the static IP under the same subnet with AP, 192.168.1.xx

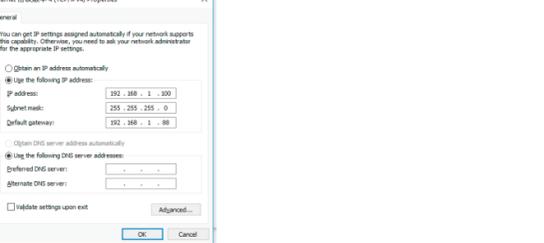

**Step 2.** Please launch a browser such as Google Chrome or Firefox, type 192.168.1.88 into address bar and click on enter to get in the login page of wireless access point. The default login password is "admin".




**Step 3.** After get in the management page, On the left side menu, please go to [Wizard] to setup the access point



**Step 4.** Select the appropriate operation mode and follow the instruction of wizard to finish the settings. If already exist a Router in your network, please choose, Fit AP mode; if not, you can choose Wireless Router mode. Notice: if you do a reset, AP will recovery to Fit AP mode

- Fit AP Mode default Login IP: 192.168.1.88 admin/admin

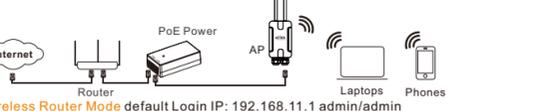

- Wireless Router Mode default Login IP: 192.168.11.1 admin/admin




## Cloud management settings

**Step 1.** Launch your web browser then enter <http://cloud2.wireless-tek.com> in the address bar.


**Step 2.** Register an account password with user name or email.

**Step 3.** log in to the cloud account with the account password after registration.

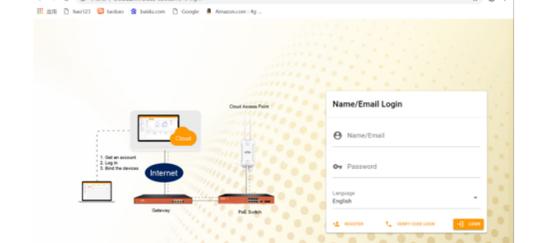


After the login is successful, the steps to bind the device on the cloud account are as follows:


(1) Click ADD NETWORK

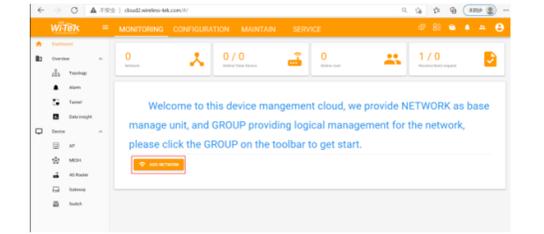

(2) Fill in the group name and location, click save.

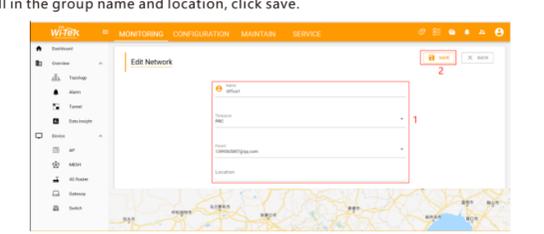


(3) And click next.

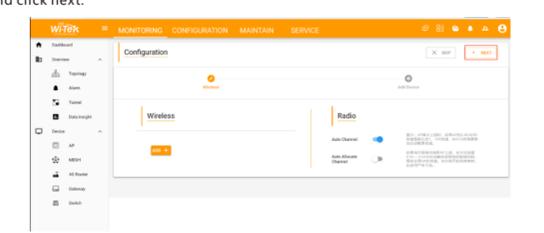


(4) Enter serial number, click ADD to create and click FINISH, the configuration is complete.


Note: The 17-digit SN code of the Add device is shown on the sticker on the back of the device.

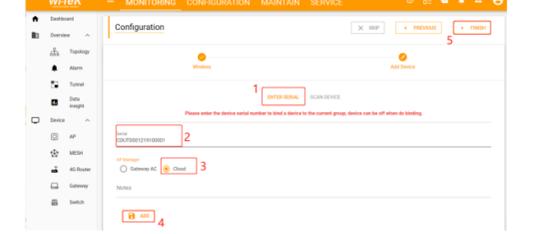

(5) In the relevant device options, you can see the bound device information.

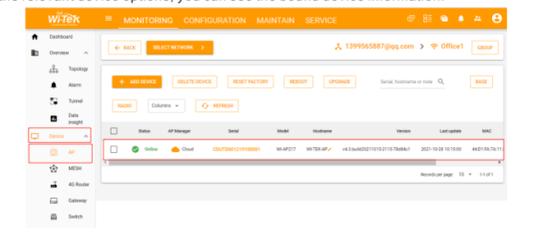

(6) Click Tunnel, Select binding device type, click EWEB to log in to the device.

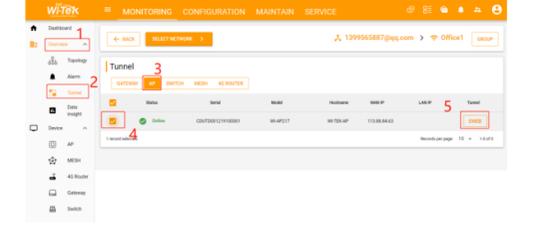

## Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you a new product of the same model.
- If the product defects within the three-year warranty period, we will provide the professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.



Wireless-Tek Technology Limited  
 Address: Biaofang Technology Building 402, Bao'an street,  
 Baoan District, Shenzhen City, Guangdong, China  
 Website: www.wireless-tek.com  
 Tel: 86-0755-32811290  
 Email: sales@wireless-tek.com  
 Technical Support: tech@wireless-tek.com

