




Quick Installation Guide

Cloud Easy Smart Gigabit PoE Switch

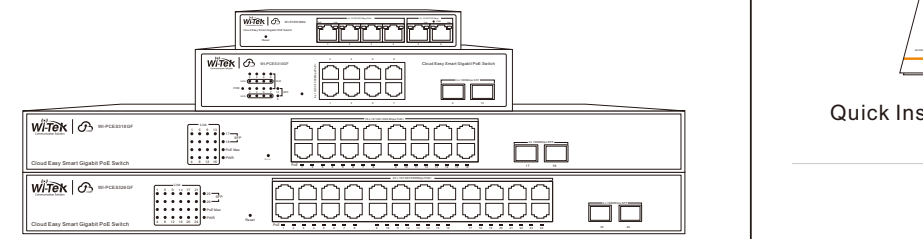


WI-PCES306G | WI-PCES310GF | WI-PCES318GF | WI-PCES326GF


www.wireless-tek.com

1. Package Contents

WI-PCES306G

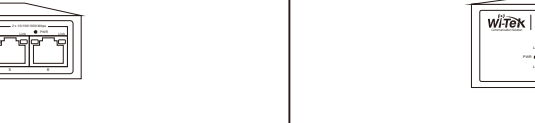

Switch x 1

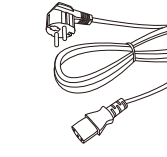

Quick Installation Guide x 1



Power Cord x 1




Mats x 4


WI-PCES310GF, WI-PCES318GF, WI-PCES326GF




Switch x 1

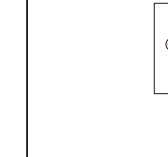

Quick Installation Guide x 1

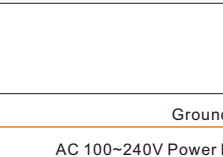

Power Cord x 1

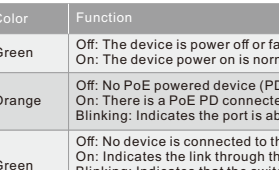


Mounting Accessories
(Hook x 2, Mats x 4, Screw x 8)

2. Appearance Overview


For WI-PCES306G

• Front Panel

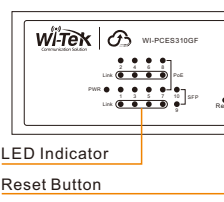

Reset Button
4*802.3af/at PoE Gigabit Ports
2*10/100/1000Mbps RJ45 Ports

• Back panel

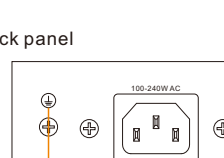


Grounding
AC 100~240V Power Port

• LED indicator

LED	Color	Function
PWR	Green	Off: The device is power off or failed On: The device power on is norma
PoE	Orange	Off: No PoE powered device (PD) connected. On: There is a PoE PD connected to be port, which supply power successfully. Blinking: Indicates the port is abnormal.
Link	Green	Off: No device is connected to the corresponding port. On: Indicates the link through that port is successfully established Blinking: Indicates that the switch is actively sending or receiving data over that port.


For WI-PCES310GF

• Front Panel

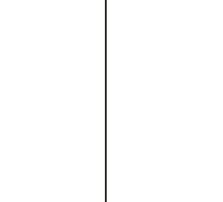

LED Indicator
Reset Button
16*802.3af/at PoE Gigabit Ports
2*1000Mbps SFP Slots

• Back panel

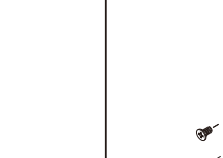


Grounding
AC 100~240V Power Port

• LED indicator

LED	Color	Function
PWR	Green	Off: The device is power off or failed On: The device power on is norma
SFP	Green	On: Port connected Off: Port disconnected Blinking: Data transmission
PoE	Orange	Off: No PoE powered device (PD) connected. On: There is a PoE PD connected to be port, which supply power successfully. Blinking: Indicates the port is abnormal.
PoE Max	Green	Off: PoE output power is less than 80% of the total power. On: PoE output power is greater than or equal to 80% of the total power.
Link	Green	Off: No device is connected to the corresponding port. On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port.


For WI-PCES318GF

• Front Panel

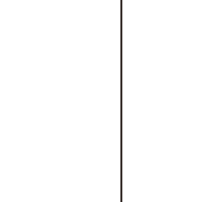

LED Indicator
Reset Button
16*802.3af/at PoE Gigabit Ports
2*1000Mbps SFP Slots

• Back panel

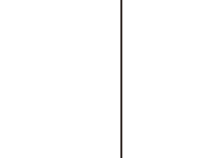


Grounding
AC 100~240V Power Port

• LED indicator

LED	Color	Function
PWR	Green	Off: The device is power off or failed On: The device power on is norma
SFP	Green	On: Port connected Off: Port disconnected Blinking: Data transmission
PoE	Orange	Off: No PoE powered device (PD) connected. On: There is a PoE PD connected to be port, which supply power successfully. Blinking: Indicates the port is abnormal.
PoE Max	Green	Off: PoE output power is less than 80% of the total power. On: PoE output power is greater than or equal to 80% of the total power.
Link	Green	Off: No device is connected to the corresponding port. On: Indicates the link through that port is successfully established Blinking: Indicates that the Switch is actively sending or receiving data over that port.

3. Installation


• Desktop Installation (WI-PCES306G)

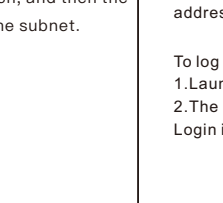

• Desktop Installation (WI-PCES310GF)



 • Rack Mounted (WI-PCES310GF, WI-PCES318GF, WI-PCES326GF)




• Rack Mounted (WI-PCES318GF, WI-PCES326GF)




4. Configuration

First, the device is powered on, the internet is connected to the WAN port of the gateway, the other LAN port of the gateway is connected to the Cloud Easy Smart PoE Switch, and then the PC is connected to the switch. Make sure the PC and gateway are on the same subnet.

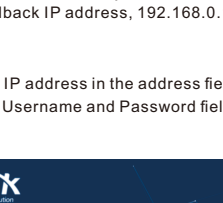



• Log in to the switch locally

Let the Switch obtain an IP address and then check the DHCP server to see which IP address was assigned.
The Switch is set to DHCP by default, so it will try to automatically obtain an IP address. If that fails, then it will use the default fallback IP address, 192.168.0.1

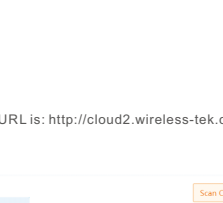


• Cloud login switch configuration

  1. Log in to the cloud management interface
(No account, you need to register an account to log in, The URL is: http://cloud2.wireless-tek.com)







5. Cloud Management

2. Enter the cloud binding switch
(explain: The switch must be connected to the Internet to bind successfully)

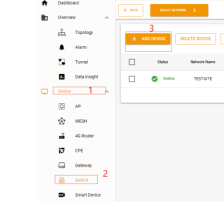

    
3. After binding, you can use the Switch in the Tunnel option in the cloud management, and then choose to use EWEB or TELNET to enter the switch.
(The EWEB channel can be created only when the easy smart switch is linked with the other type of Wi-Tek cloud management device, such as cloud L2, L3 management switch, gateway, wireless AP, etc.)



6. Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you with a new product of the same model.
- If the product defects within the three-year warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.

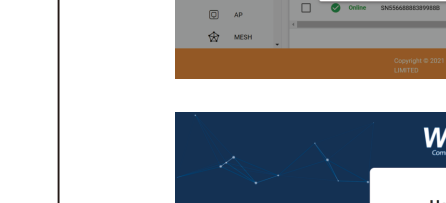

Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812, Huangjiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

