



Quick Installation Guide

Cloud-Managed Wireless Ceiling Access Point



 
WI-AP217-Lite | WI-AP218AX-Lite
Hardware Version: V2.0

www.wireless-tek.com


1.Packing Content



1 × AP




4 × Plastic Anchor

 

4 × Self-Tapping Screws




1 × Ethernet Cable

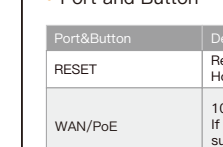

1 × Quick Installation Guide

2. Appearance Overview

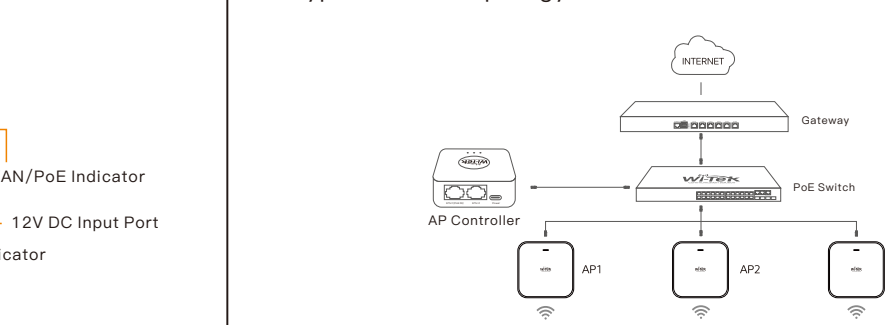

Reset Button
WAN/PoE Port
LAN Port
LAN Indicator
12V DC Input Port
WAN/PoE Indicator

• LED indicator


LED Indicators	Status	Description
System Indicator	Off	The device is powered off.
	On	The system is working normally.
LAN Indicator	Off	The LAN port is disconnected.
	On	The LAN port is connected via Ethernet cable.
WAN/PoE Indicator	Off	The port is disconnected.
	On	The port is connected via Ethernet cable.

• Port and Button


Port&Button	Description
RESET	Reset button, which is used to restore the factory. Holding down the reset button for 10 seconds to revert to factory settings.
WAN/PoE	10/100/1000Mbps Base-T Ethernet Port, which supports 802.3af/at PoE Input. If the AP is powered through PoE, please connect this port to the PoE switch supporting 802.3af output. It is generally connected to the upstream switch.
LAN	10/100/1000Mbps Base-T Ethernet port. It is generally connected to wired LAN devices such as PC.
DC	DC Input: 12V,1A. The AP is powered through 12V DC Input.

3. Typical Connection

• Bypass mode topology

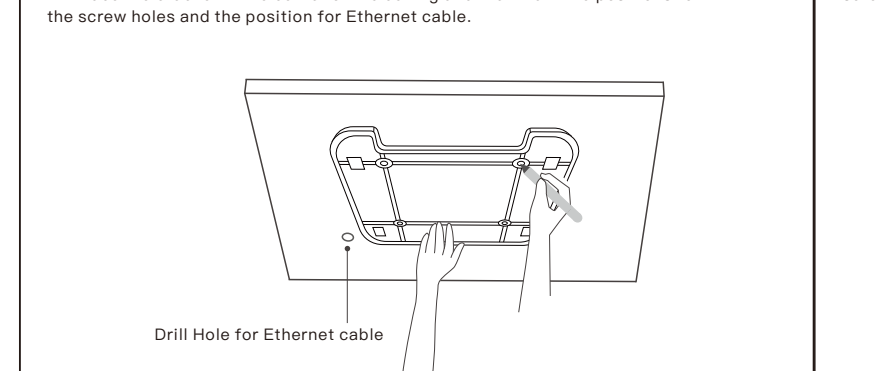


• AC Gateway mode topology

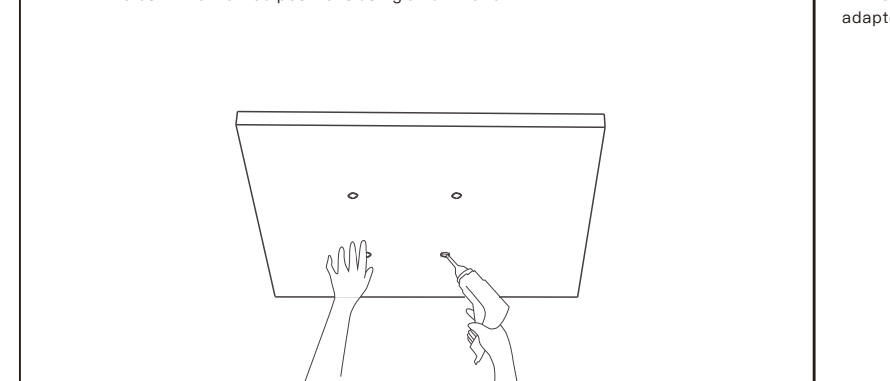

4. Device Installation


• Ceiling Mounting

- 1. Place the bracket in the center of the ceiling and then mark the positions for the screw holes and the position for Ethernet cable.

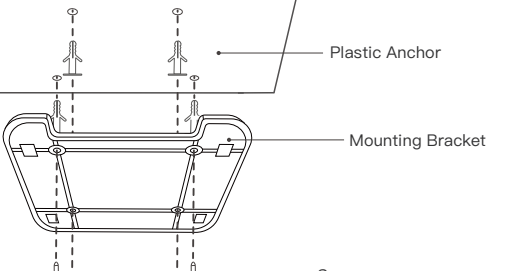


Drill Hole for Ethernet cable

• 2. Drill holes in the marked positions using a hammer drill.

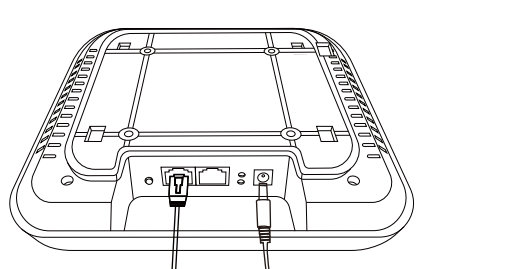


• 3. Knock the plastic anchors into the holes by using the rubber hammer. Align the screw holes in the bracket with the holes in the ceiling and use the self-tapping screws to fix the bracket.

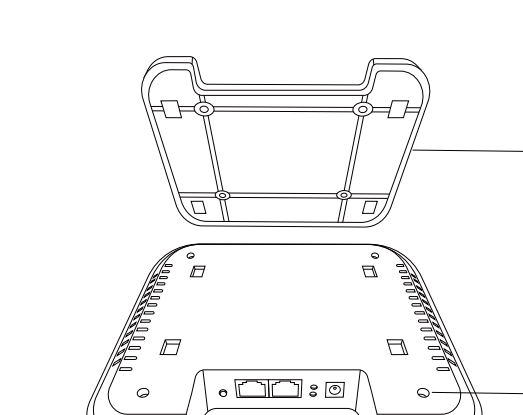

• 4. Power the AP by connecting a PoE switch to the WAN/PoE port or a power adapter to the 12V DC Input port.




• 5. Align the slots of the AP with the hooks of the bracket. Push the AP to one side until the AP is fixed.

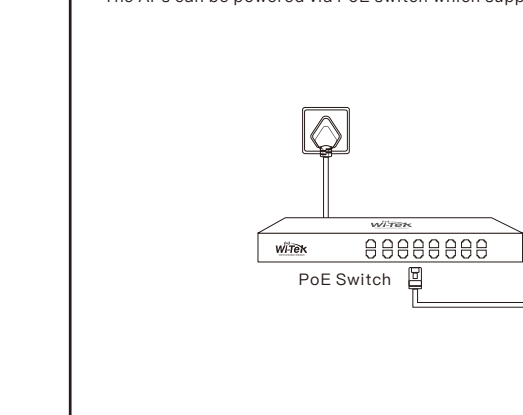


• Power via PSE Device

- The APs can be powered via PoE switch which supports 802.3af PoE output.

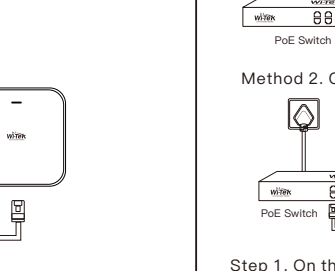

• Power via Power adapter


- Some APs can be powered via power adapter which supports 12V DC output.

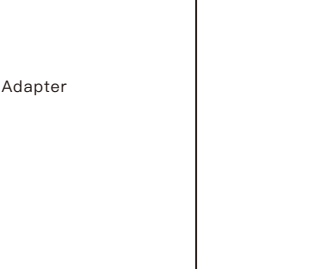

5. Power Supply


• Power via PSE Device

- The APs can be powered via PoE switch which supports 802.3af PoE output.

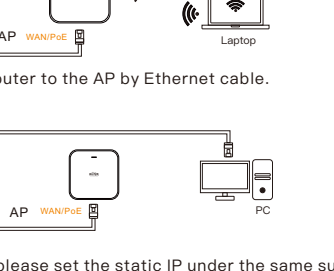


• Power via Power adapter

- Some APs can be powered via power adapter which supports 12V DC output.

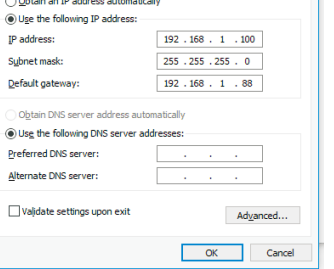

6. Configuration Method

 
Method 1. Connect computer to the wireless signal of AP, the default SSID is "Wi-TEK xxxx". Password is 88888888




Method 2. Connect computer to the AP by Ethernet cable.




Step 1. On the computer, please set the static IP under the same subnet with AP, 192.168.1.xx

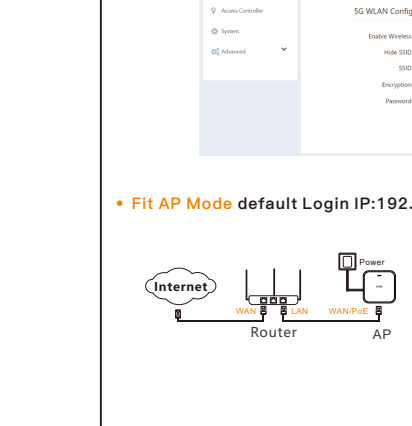


• 3. Knock the plastic anchors into the holes by using the rubber hammer. Align the screw holes in the bracket with the holes in the ceiling and use the self-tapping screws to fix the bracket.

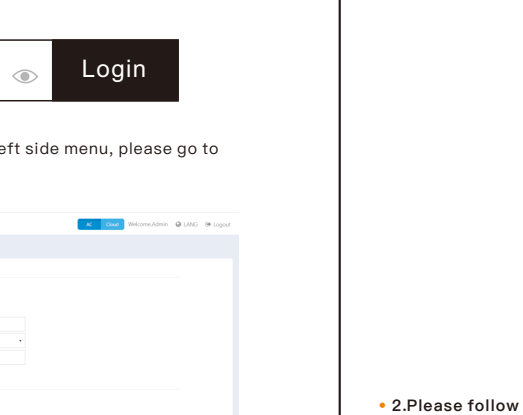

• 4. Power the AP by connecting a PoE switch to the WAN/PoE port or a power adapter to the 12V DC Input port.

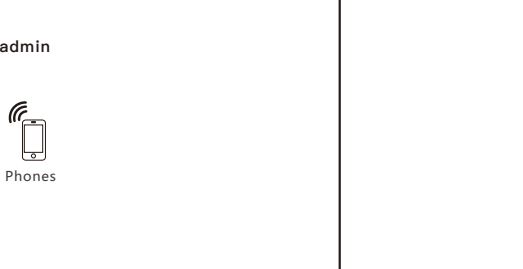


• 5. Align the slots of the AP with the hooks of the bracket. Push the AP to one side until the AP is fixed.

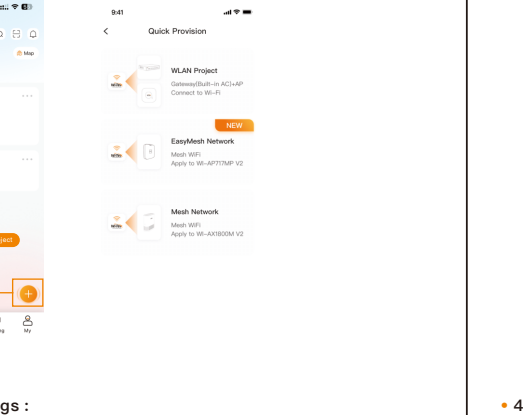


• Power via PSE Device

- The APs can be powered via PoE switch which supports 802.3af PoE output.

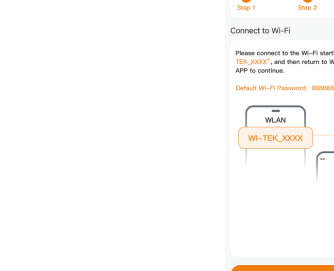

• Power via Power adapter

- Some APs can be powered via power adapter which supports 12V DC output.

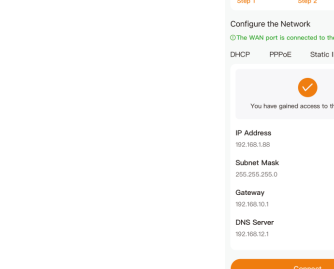

6. Configuration Method


Method 1. Connect computer to the wireless signal of AP, the default SSID is "Wi-TEK xxxx". Password is 88888888




Method 2. Connect computer to the AP by Ethernet cable.



Step 1. On the computer, please set the static IP under the same subnet with AP, 192.168.1.xx

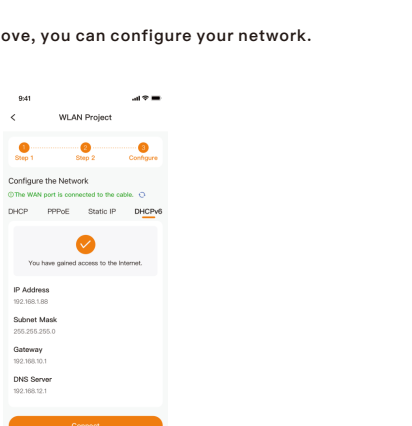

• 3. Knock the plastic anchors into the holes by using the rubber hammer. Align the screw holes in the bracket with the holes in the ceiling and use the self-tapping screws to fix the bracket.

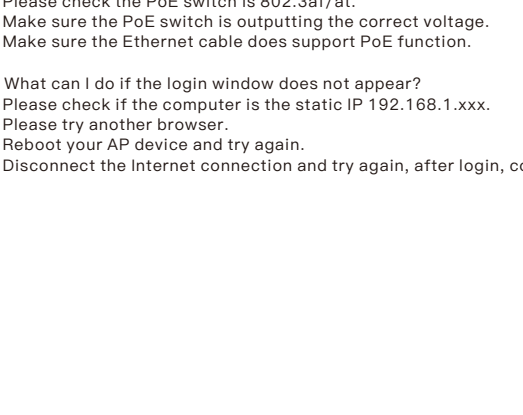


• 4. Power the AP by connecting a PoE switch to the WAN/PoE port or a power adapter to the 12V DC Input port.



7. Quick Setup Wizard on Wi-Tek Cloud APP

• 1. Go in the APP UI as followings and then create a WLAN project.

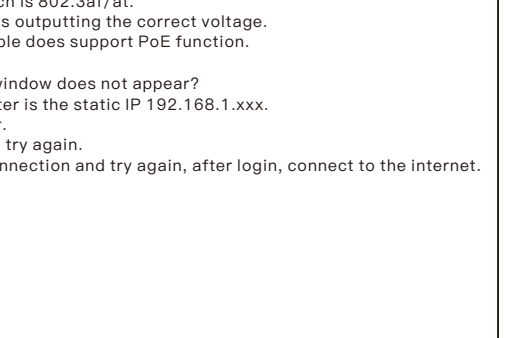

• 2. Please follow steps as followings: Power on your AP and connect it to the Internet, then restore it to the factory.




• 3. Connect your phone to Wi-Fi

Note: The initial SSID is starting with "Wi-TEK_XXXX" and the default password is 88888888.



• 4. After completing the steps above, you can configure your network.

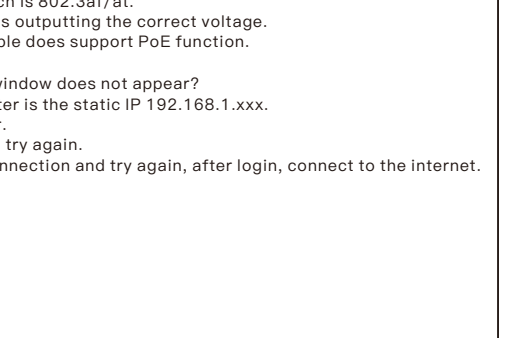

• 5. Setup Complete

After finishing configuring the network, the network is now up.

• Fit AP Mode default Login IP: 192.168.1.88 admin/admin



8. FAQ

Q1. The LED is not lit.

A1: Please check the PoE switch is 802.3af/at.

A2: Make sure the PoE switch is outputting the correct voltage.

A3: Make sure the Ethernet cable does support PoE function.

Q2. What can I do if the login window does not appear?

A1: Please check if the computer is the static IP 192.168.1.xxx.

A2: Please try another browser.

A3: Reboot your AP device and try again.

 
A4: Disconnect the Internet connection and try again, after login, connect to the internet.

Warranty Card

Technical Support



Company Website



Cloud Management



Wireless-Tek Technology Limited

Address: Building 3, Units 1801-1807, 1812,

Huangqiang Era Plaza, Tangwei Community,

Fuhai Street, Bao'an District, Shenzhen City,

Guangdong Province, China.

Website: www.wireless-90

Email: sales@wireless-tek.com

Technical Support: tech@wireless-tek.com

