


Quick Installation Guide


Cloud Easy Smart 250m PoE Switch

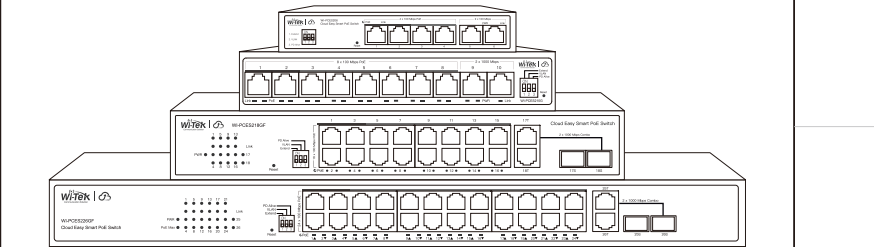

WI-PCES206 | WI-PCES210G | WI-PCES218GF | WI-PCES226GF

www.wireless-tek.com

1. Package Contents

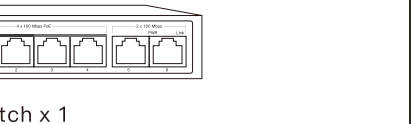

Switch x 1



Quick Installation Guide x 1



Power Cord x 1




Mounting Accessories
(Hook x 2, Mats x 4, Screw x 8)
(only for WI-PCES218GF WI-PCES226GF)


2. Appearance Overview

For WI-PCES206

• Front Panel

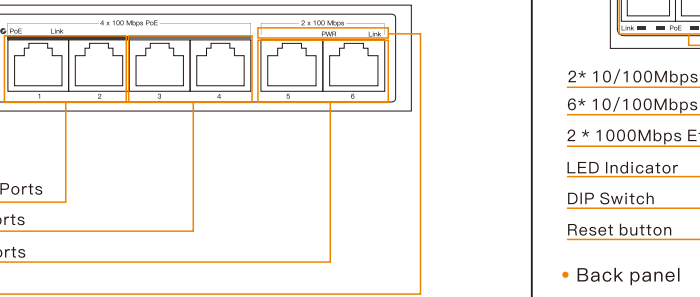

• Back panel

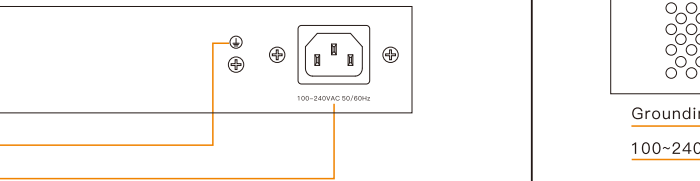


• LED Indicator and Button


| WI-PCES206 DIP Switch Description | |
|-----------------------------------|---|
| Extend | The transmission distance of PoE Port can be up to 250m with 10Mbps VLAN |
| VLAN | Enable Port VLAN, each PoE port just can send data to uplink port |
| PD Alive | All PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices |
| LED Indicator&Button | |
| PWR | On: The switch is powered on Off: The switch is powered off or power supply is abnormal |
| PoE | On: There is a PoE PD connected to the port, which supply power successfully Off: No PoE powered device (PD) connected |
| Link | On: Port connected Off: Port disconnected |
| Reset | Hold for >5 sec. to restore factory default |

For WI-PCES210G

• Front panel

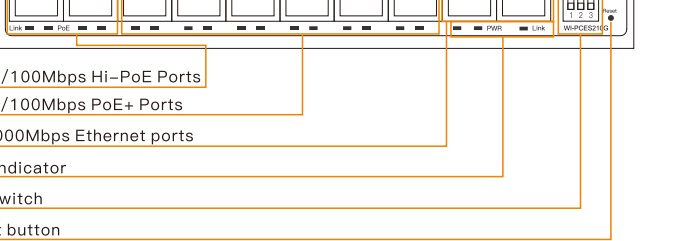

• Back panel

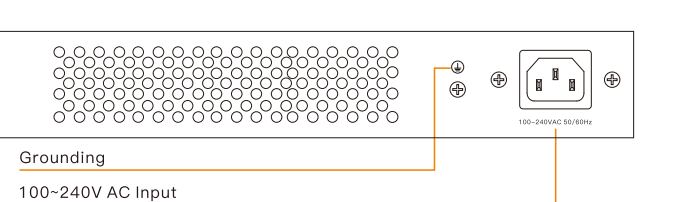


• LED Indicator and Button


| WI-PCES210G DIP Switch Description | |
|------------------------------------|---|
| Extend | The transmission distance of PoE Port can be up to 250m with 10Mbps VLAN |
| VLAN | Enable Port VLAN, each PoE port just can send data to uplink port |
| PD Alive | All PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices |
| LED Indicator&Button | |
| PWR | On: The switch is powered on Off: The switch is powered off or power supply is abnormal |
| PoE | On: There is a PoE PD connected to the port, which supply power successfully Off: No PoE powered device (PD) connected |
| Link | On: Port connected Off: Port disconnected |
| Reset | Hold for >5 sec. to restore factory default |

For WI-PCES218GF

• Front panel

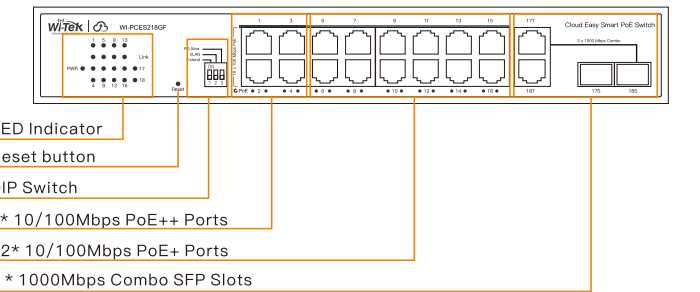

• Back panel

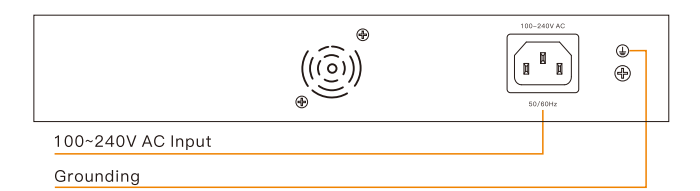


• LED Indicator and Button


| WI-PCES218GF DIP Switch Description | |
|-------------------------------------|---|
| Extend | The transmission distance of PoE Port can be up to 250m with 10Mbps VLAN |
| VLAN | Enable Port VLAN, each PoE port just can send data to uplink port |
| PD Alive | All PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices |
| LED Indicator&Button | |
| PWR | On: The switch is powered on Off: The switch is powered off or power supply is abnormal |
| PoE | On: There is a PoE PD connected to the port, which supply power successfully Off: No PoE powered device (PD) connected |
| Link | On: Port connected Off: Port disconnected |
| Reset | Hold for >5 sec. to restore factory default |

For WI-PCES226GF

• Front panel

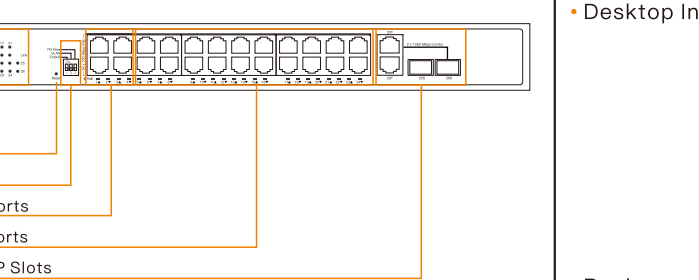

• Back panel

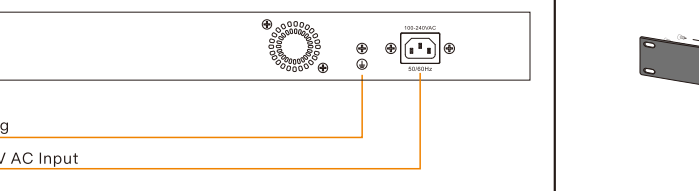


• LED Indicator and Button


| WI-PCES226GF DIP Switch Description | |
|-------------------------------------|---|
| Extend | The transmission distance of PoE Port can be up to 250m with 10Mbps VLAN |
| VLAN | Enable Port VLAN, each PoE port just can send data to uplink port |
| PD Alive | All PoE ports enable PoE watchdog function, which can detect and reboot the offline compliant PoE powered devices |
| LED Indicator&Button | |
| PWR | On: The switch is powered on Off: The switch is powered off or power supply is abnormal |
| PoE | On: There is a PoE PD connected to the port, which supply power successfully Off: No PoE powered device (PD) connected |
| Link | On: Port connected Off: Port disconnected |
| PoE Max | Blinking: Data transmission |
| Reset | When total PoE output power > Power Budget * 80%, the LED light will be on Hold for >5 sec. to restore factory default |

3. Installation

• Desktop Installation

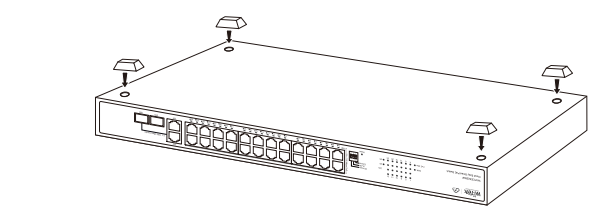

• Rack-mount Installation(For WI-PCES218GF WI-PCES226GF)

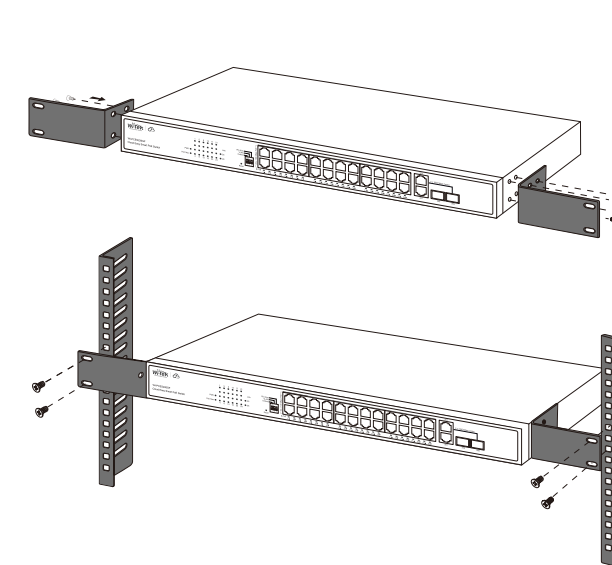


• Log in to the switch locally

Let the Switch obtain an IP address and then check the DHCP server to see which IP address was assigned.
The Switch is set to DHCP by default, so it will try to obtain an IP address automatically. If that fails, then it will use the default fallback IP address, 192.168.0.1


To log in, follow these steps:

1. Launch your web browser, you type the appropriate IP address in the address bar
2. The login screen will appear. The default username and password are both admin

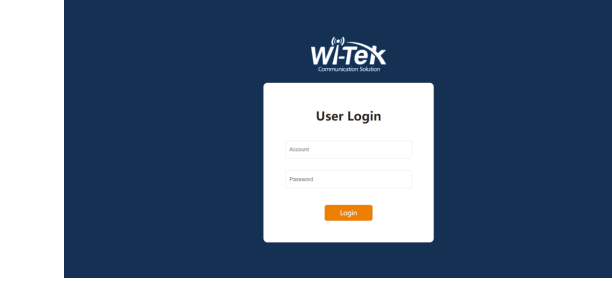


• Cloud login switch configuration

1. Log in to the cloud management interface
(No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

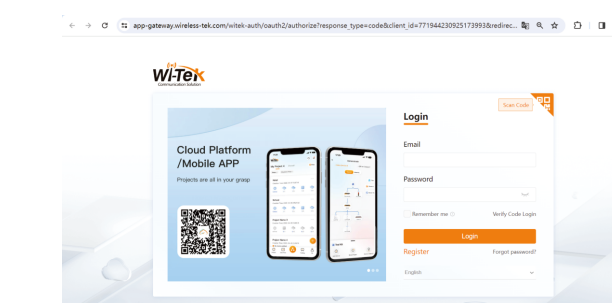



2. Enter the cloud binding switch

(explain: The switch must be connected to the Internet to bind successfully)

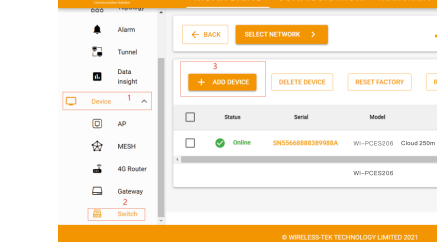



Please enter the device serial number to bind a device to the current group, device can be off when binding.

(Explanation: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below)

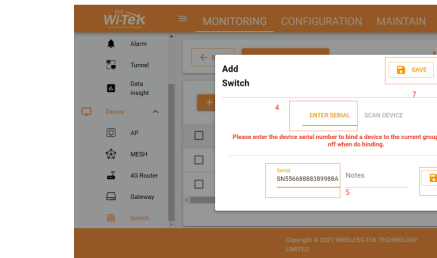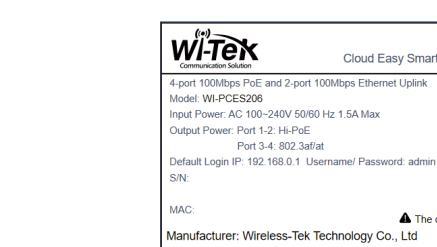

3. After binding, you can use the Switch in the Tunnel option in the cloud management, and then use EWEB to enter the switch.

(The EWEB channel can be created only when the easy smart switch is linked with the other type of Wi-Tek cloud management device, such as cloud L2, L3 management switch, gateway, wireless AP, etc.)

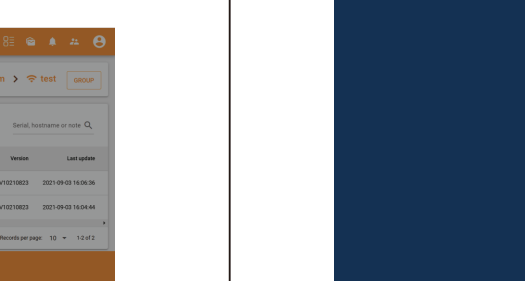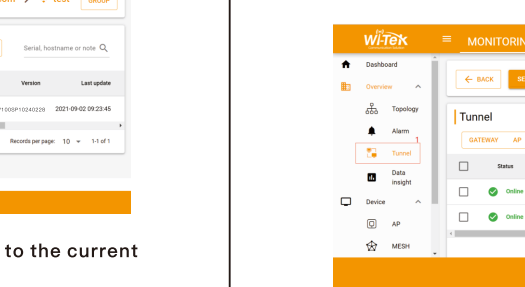

Warranty Card

| | |
|-------------------|--|
| Username | |
| Address | |
| Telephone No. | |
| Purchase Shop | |
| Purchase Address | |
| Product Model No. | |
| Purchase Time | |
| Serial No. | |
| Dealer Signature | |

- If the product defects within three months after purchase, we will provide you with a new product of the same model.
- If the product defects within the three-year warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Technical Support



Company Website



Cloud Management

Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

