

How to Activate HiLook Hybrid Alarm System via Keypad


Device Information

Device	Firmware Version
HA-ALARM-P48	

Configuration



Step 1. Create a New Password for Hybrid Alarm System

The default password for HiLook Hybrid Alarm System is the last 6 digits of its Serial Number. The new password is used for Hik-Connect login, which should contain Uppercase Letters, Lowercase Letters and Numbers.

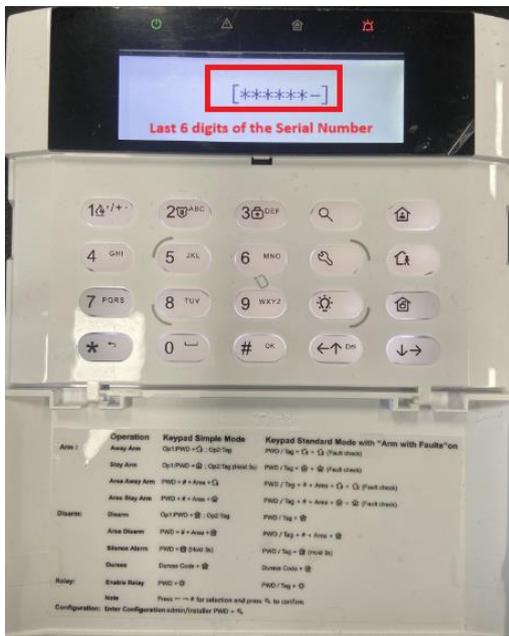

Step 2. Create New Users




Press default password +  to log into the panel Settings -> User Management -> Add User -> Create User Name -> Create Keypad Password (for this user to Arm/Disarm system)

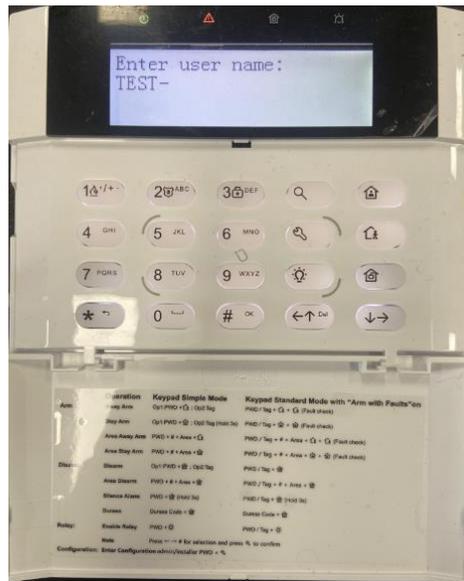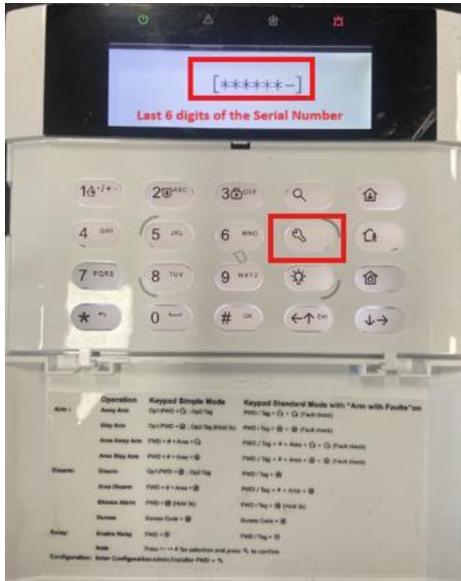

Step 3. Enroll Tag for Users


Once the user has been created, a tag can be enrolled for this user, which allows the user to arm/disarm system by swiping tag.

Tag Management -> Add Tag -> Swipe the Tag (in the middle area of the keypad) -> Input Tag Name

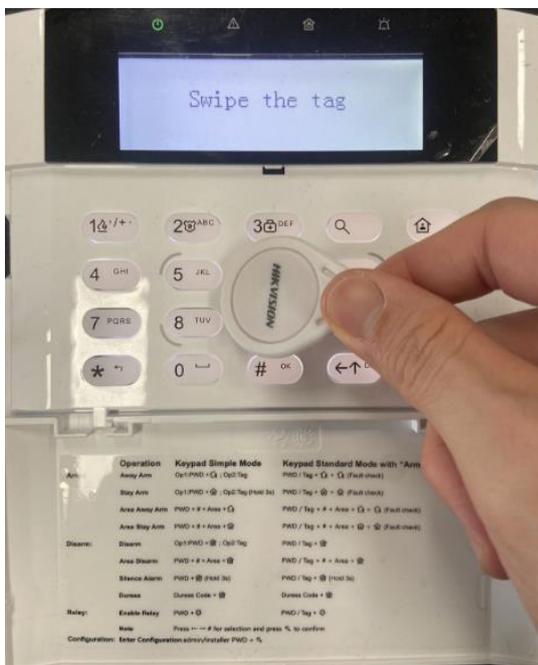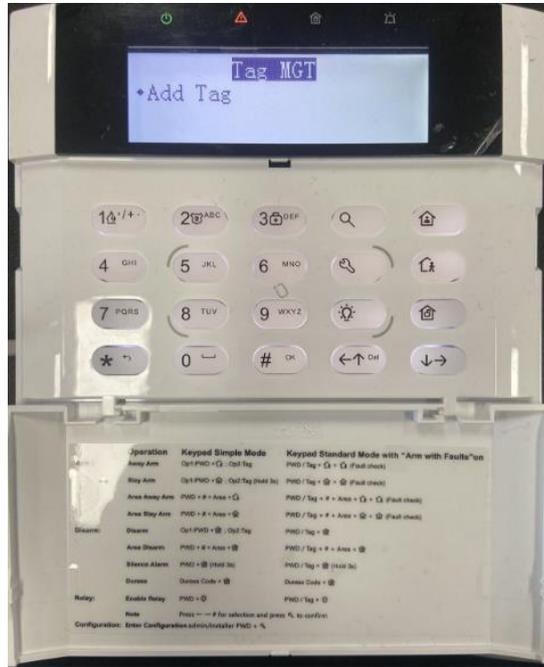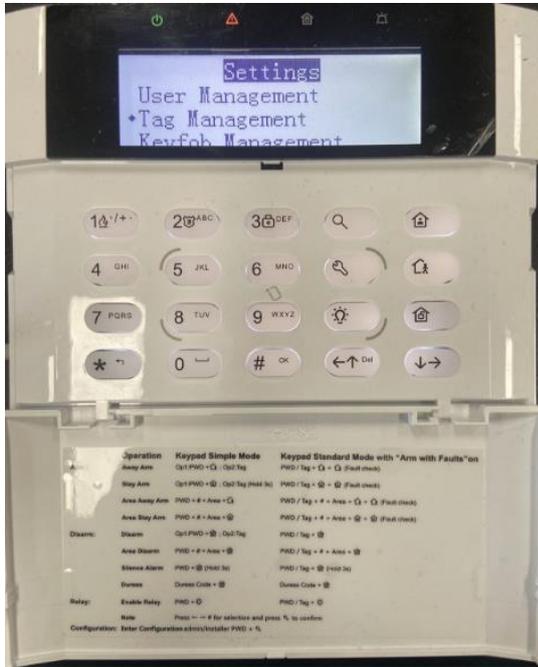





Step 4. Link Tag to Users

Select the tag -> Choose Linked User

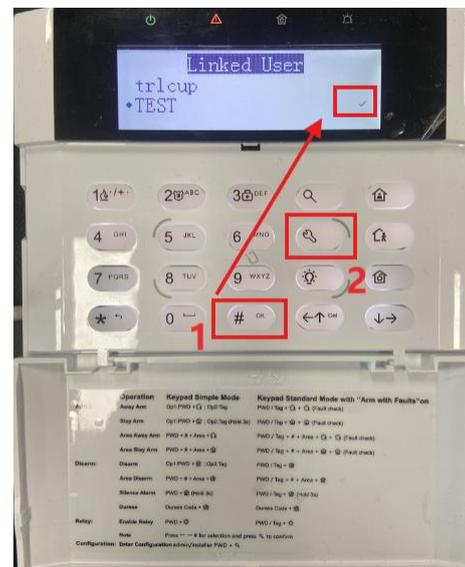

Step 5. Add Device on Hik-Connect Mobile App

Press default password +  to log into the panel Settings -> Network Management -> Cloud -> Reset a new Verification Code -> Scan QR Code via Hik-Connect -> Input the verification code just setup -> Device will show up in Hik-Connect app

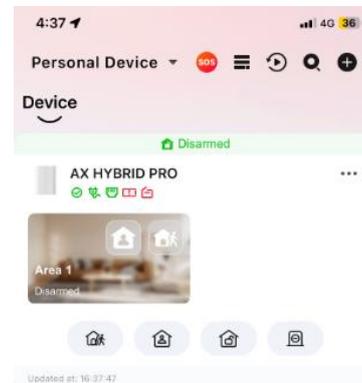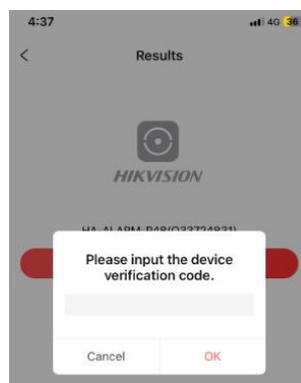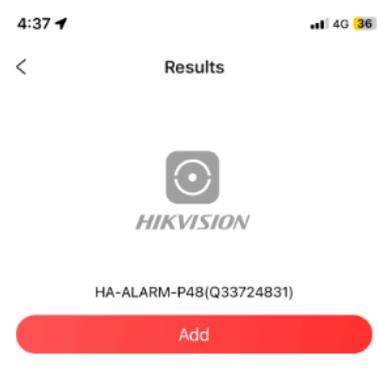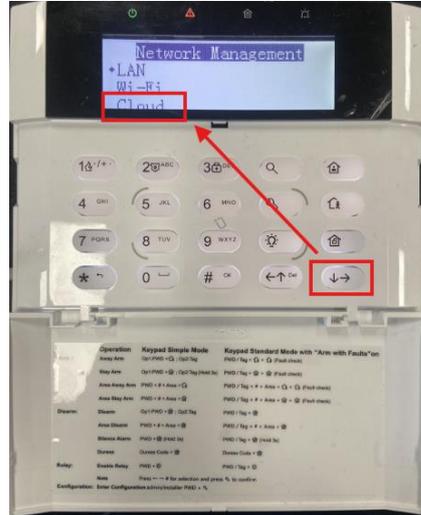

Step 6. Adjust Date and Time

Press default password +  to log into the panel Settings -> Date & Time

