





·WK-WB08-KIT


2.Hardware Overview

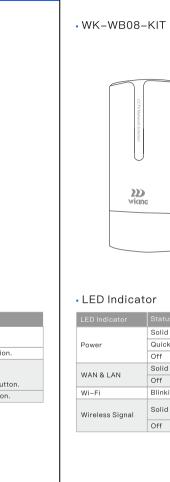

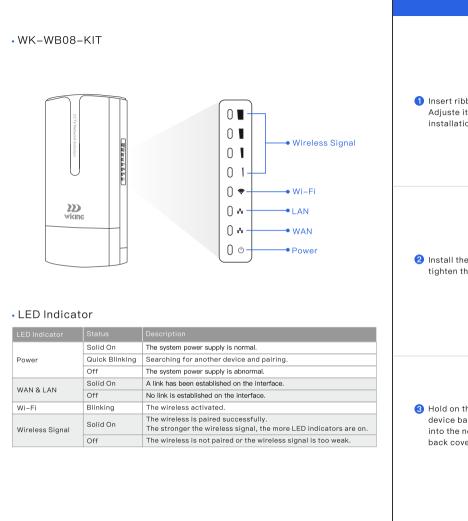


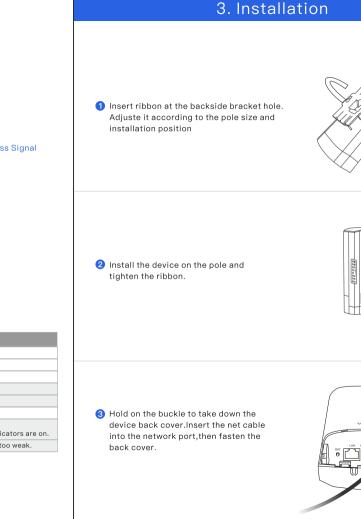

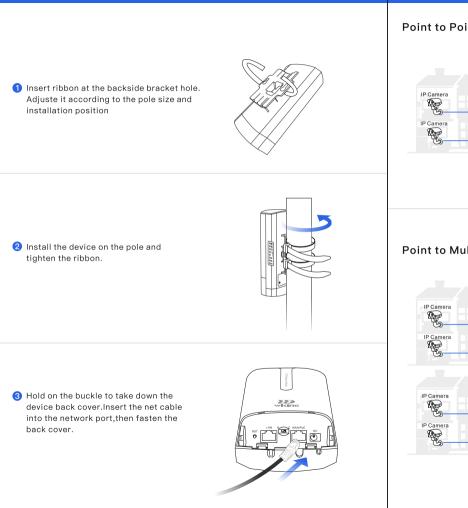


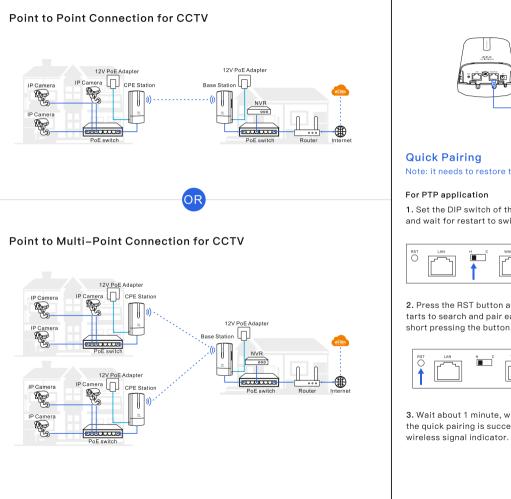



4. Application

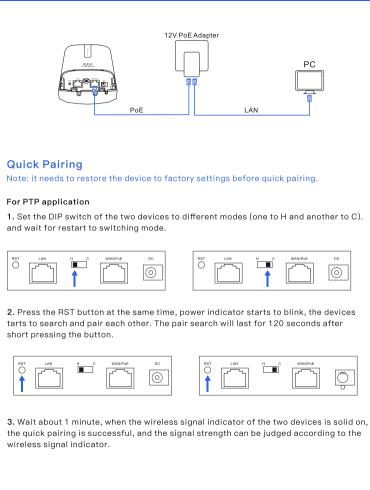

5. Quick Pairing

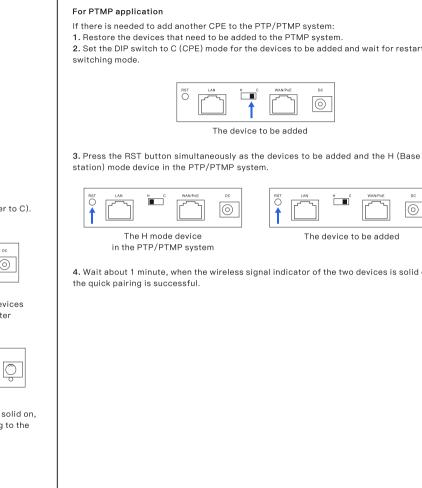

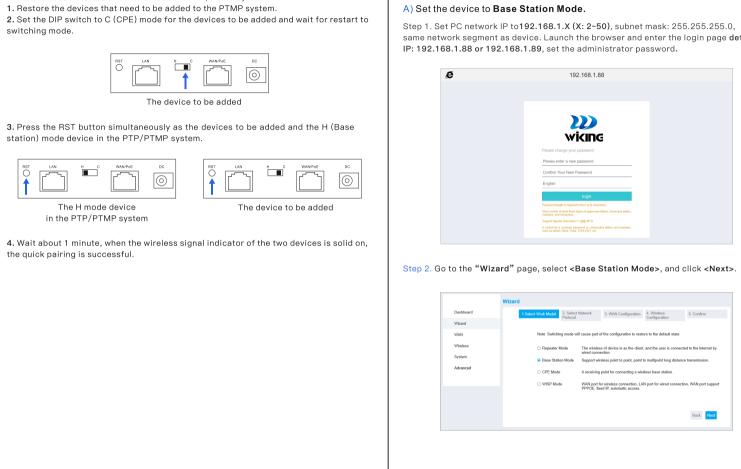


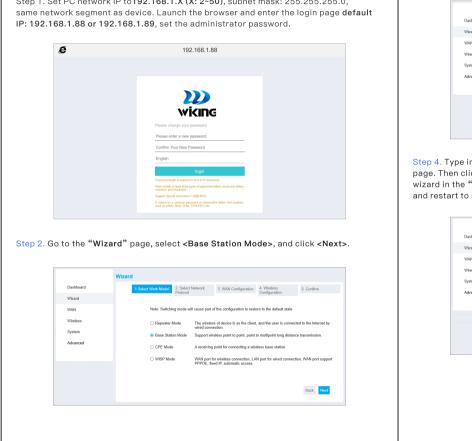

6. Management

Please enter a new password

Management by WEB

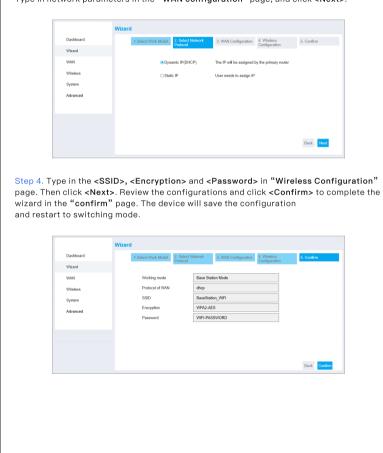

Step 3. Select the network protocol based on the network design. For example, select <Dynamic IP(DHCP)> and click <Next> in the "Select Network Protocol" page.

Type in network parameters in the "WAN configuration" page, and click <Next>.

B) Set the device to CPE Mode.

tep 5. Repeat the A) step 1, login the management WEB. Go to the "Wizard" page, Note: Switching mode will cause part of the configuration to restore to the default state Repeater Mode The wireless of device is as the client, and the user is connected to the Internet by wireld connection. OBase Station Mode Support wireless point to point, point to multipoint long distance transmission. CPE Mode A receiving point for connecting a wireless base station. WISP Mode WAN port for wireless connection, LAN port for wired connection, WAN port support PPPOE, fixed IP, automatic access. Step 6. Repeat the A) step 3, Specify the parameter in the "WAN configuration" page and click <Next>. Click <Start Scan> to search and select the base station wireless in the "Wireless Configuration" page.
 Select
 Signal
 Channel
 Wireless MAC
 SSID
 Encryption

 ®
 -22dBm
 1
 00.AA.11.BB.22.CC
 BaseStation_WiFi
 WPA2 PSK (CCMP)
 O -20dBm 1 33:AA:44:BB:55:CC Test_1 None

Finish the above steps and wait for the device to restart. The PTP application after completing the PTP application.

lake sure your device has access to the Internet. Enter https://cloud2.wireless–tek.co p 7. Type in the base station wireless parameter and click <Next>. 1 Select Work Model Protocol 3. WAN Configuration 4 Wireless Configuration 5. Co. Password WIFI-PASSWORD Step 8. Review the configurations and click < Confirm> to complete the wizard in the "confirm" page. The device will save the configuration and restart to switching mode. configuration is complete when the signal strength indicators of both devices are on. If you want to configure the PTMP application, repeat steps B) 5 ~ 8 for the other device

in the browser and log in to the cloud, add a network, or select the existing network. Go to "Device > CPE", click < ADD DEVICE >, enter the device's SN and last six hexes of t device MAC address, and click < ADD >. Wait a moment, you can find it in the device list ENTER SERIAL NUMBER SCAN DEVICE group, the last six hexes of device MAC will be used for verification Serial number Belase enter the last six hexes of the device MAC address for security. MAC address for security. AP management Gateway AC Cloud management Website: www.wireless-tek.com Tel: 86-0755-32811290 Email: sales@wireless-tek.com Technical Support: tech@wireless-tek.co

7. Cloud Management

If the product defects within the warranty period, we will provide professional Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty. Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty. Technical Support Company Website Cloud Management Wireless-Tek Technology Limited Address: Building 3, Units 1801–1807, 1812 Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen Cit Guangdong Province, China.

Warranty Card