



# Installation Notes

- 1 Thread the short safety tether through a clamp, wrap it around the vertical pole, and fasten tightly.

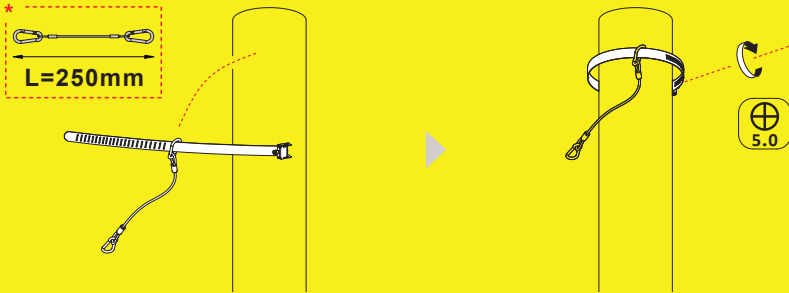


- 2 Hook the short safety tether onto the hole of the mount. Pre-hang the mount, then tighten all 4 clamps connecting the mount to the pole.

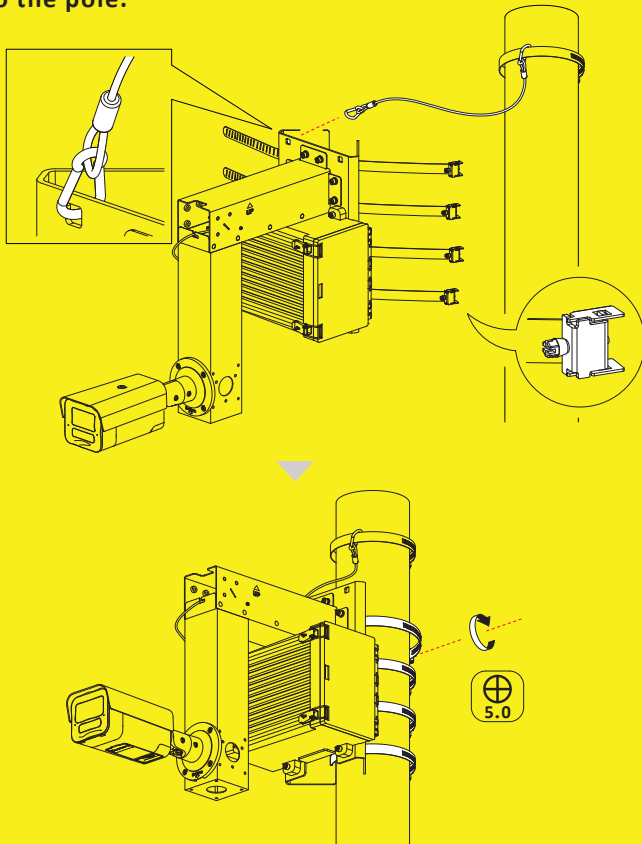


**Note:** Product appearance is for reference only and may differ from the actual product.

- 3** ① Attach the long safety tether to the panel. Align the "UP" mark on the panel with the mount, engage the panel onto the mount's pre-hook screws.

- ② Loop the long safety tether around the pole and secure its hook to the mount's hole.

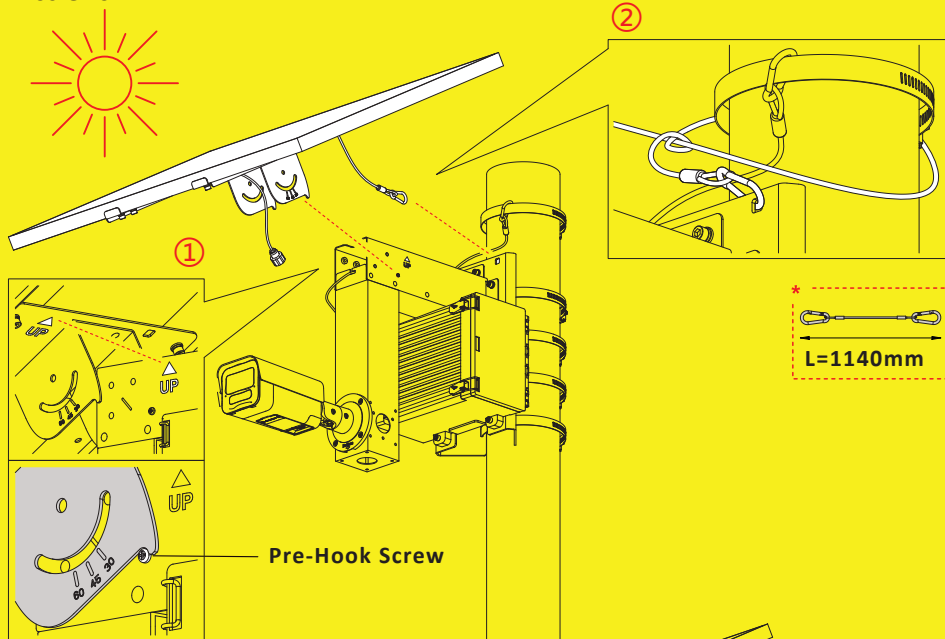

- ③ Partially tighten the side screws. Adjust the angle of the panel, and fully tighten the screws.

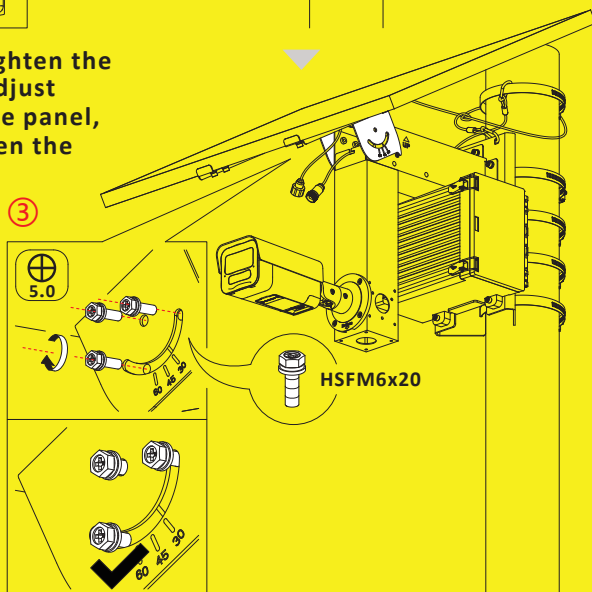

UD43582N

**Note:** Orient the solar panel towards the sun. Set tilt to your location's optimal winter angle.