

7-Inch Indoor Station Quick Start Guide UD44601B

Quick Guide

1 Set Physical Address

- 1.1 Indoor Station rotary DIP Switch Settings
- 1.2 Door Station/Outer Door Station rotary DIP Switch Settings

2 Wiring

- 2.1 System wiring
- 2.2 Wiring


3 Installation

- 3.1 Accessory Description
- 3.2 Before you start
- 3.3 Wall Mounting with Junction Box

4 Configuration

Power on and start operation.

Appearance and Interface

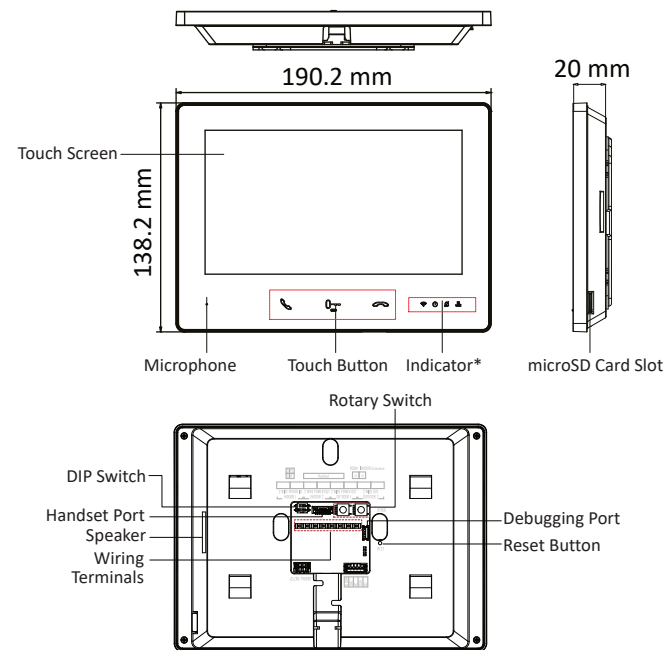


- The appearance of the device varies according to different models. Refers to the actual device for detailed information.
- The Wi-Fi indicator light only exists in devices that support Wi-Fi functions.
- Indicators will be shown after touching the touch button.

Power Indicator	IN USE Indicator	Mute Indicator	Wi-Fi Indicator	Exception/Condition
Flashing	Flashing	Off	Off	1. Incorrect DIP switch address. 2. Same DIP switch address is set for more than 1 indoor station.
Flashing	Off	Flashing	Off	Door Station Offline
Flashing	Off	Off	Off	Exception for Interface of Connecting Distributor
Off	Off	Flashing	Off	1. Touch button damaged. 2. Touch button connection exception.
/	/	/	Flashing	Wi-Fi Enabled with Connection Exception
/	/	/	Solid	Wi-Fi Enabled with Well Connection
/	/	/	Off	Wi-Fi Disabled
/	/	Flashing	Flashing	Cloud Service Enabled but Offline
Solid (After powering on)	Solid when the device is in use	Solid (After muting)	Solid (After the Wi-Fi is connected)	Operating Normally

2.1 System Wiring

- The indoor station's power supply should be 24V. The door station's power adapter is 12V. Please use the power adaptor provided in the package to power the device. Please use the power adaptor provided in the package to power the device.
- The name tag and call button are replaceable, you can replace them according to actual need. Here takes door station with 4 call buttons as an example.
- The system supports maximum 2 door stations and 4 indoor stations. The built-in power supply supports 4 indoor stations and 1 door station. Additional door station requires separate power supply.
- When there is only 1 door station, leave the sub door station which is marked red and connect the rest.

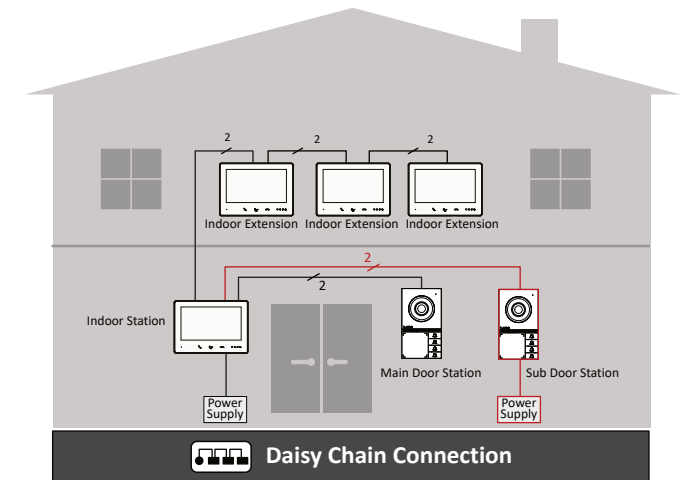

1 Set Physical Address

Door Station

Use the rotary DIP switch to set the building No., door station No., sub door station, outer door station No. and door open duration. The Tens column refers to the number in Tens, and the Units column refers to the number in Units. On each rotary DIP switch, 0 to 9 refers to No. 0 to 9.

In total, you can use 1 to 99 to number the building.
If the door station is main door station, the **Door Station No.** should be set as 0; If it is sub door station, set **Door Station No.** as 1~16; If it is outer door station, set **Door Station No.** as 90~99.
Use the screwdriver to adjust the number. The arrow indicates the number.

For example:

Building No. (1~99)

Tens: 2, Units: 1 → The No. is 21.

Door Station No.

0 → The No. is 03. DIP Switch Range of Door Station No.:
Main Door Station: 0
Sub Door Station: 1~16
Outer Door Station: 90~99

Main Station No. (Reserved)

0 → Door Open Duration

Rotary Switch	Open Duration(s)	Lock Type
0	2	DC Pulse (Lock 1)
1	5	DC Pulse (Lock 1)
2	10	DC Pulse (Lock 1)
3	2	Relay(Lock 2)
4	5	Relay(Lock 2)
5	10	Relay(Lock 2)
6	2	Lock 1+Lock 2
7	5	Lock 1+Lock 2
8	10	Lock 1+Lock 2
9		DC Pulse (Lock 1)+Mechanical Doorbell(Lock 2), duration set on the web.

- It is recommended to stick the supplied number remark on the back of the device to indicate the device's No.

Indoor Station

No. Settings

Use the rotary DIP switch to set the indoor extension No. And the room No. The Units column refers to the number in Units.

On each rotary DIP switch, 0 to 9 refers to No. 0 to 9.

In total, you can use 1 to 3 to number the indoor extension No., and use 1 to 9 to number the room.

Use the screwdriver to adjust the number. The arrow indicates the number.

Device Mode Settings



Use the rotary DIP switch to set the indoor station's device mode according to actual scenarios.

Villa Mode: More than one device can be lightened up; when the extension is called, it can be lightened up and intercom via videos.

Building Mode: In one power supply system, up to 4 indoor stations can be wired and up to 1 indoor station can be normally used at the same time. When other devices are lightened up, the IN USE indicator will also be lightened up. Separate power supply is not supported. When the extension is called, the screen cannot be lightened up.

- DIP 1 and DIP 2 are for mode settings.
- If DIP 2 is set as 1, the function of **Professional Studio** can be set.
- The device is on debugging mode when the extension No. is 9. You can operate the indoor station on debugging mode without connecting to the door station.

For example:

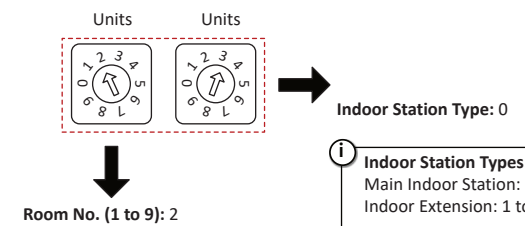

- DIP 1 and DIP 2 are for mode settings.
- The device is on debugging mode when the extension No. is 9.

About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information herein are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website (<https://www.hikvision.com>). Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

About this Product

This product can only enjoy the after-sales service support in the country or region where the purchase is made.

Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- HIKVISION and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

- TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.
- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.
- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.
- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

